



Operating Guide


AB-PM DN 40-100

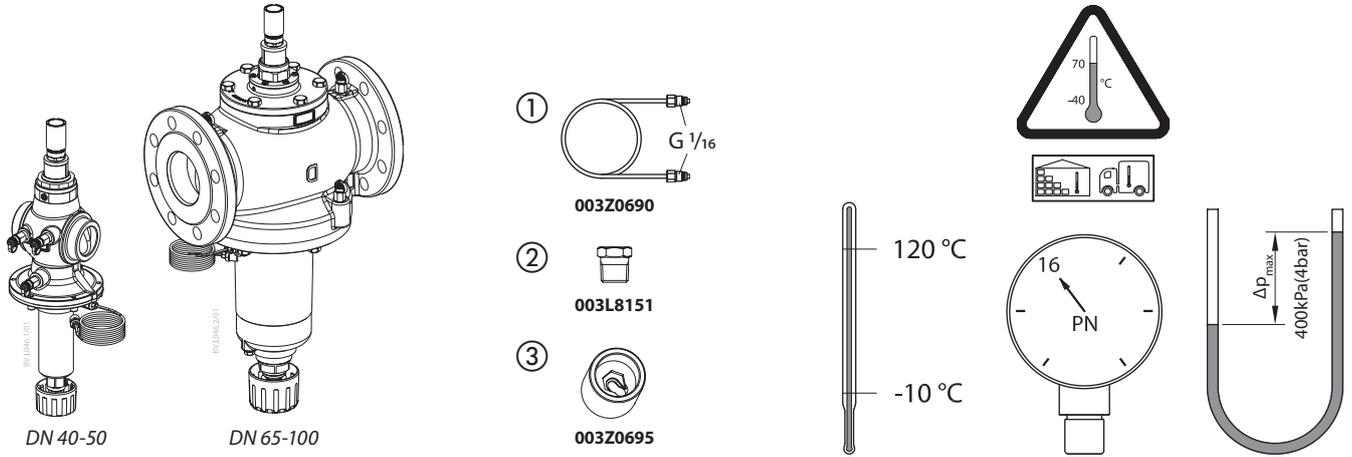

1 Mounting of handle

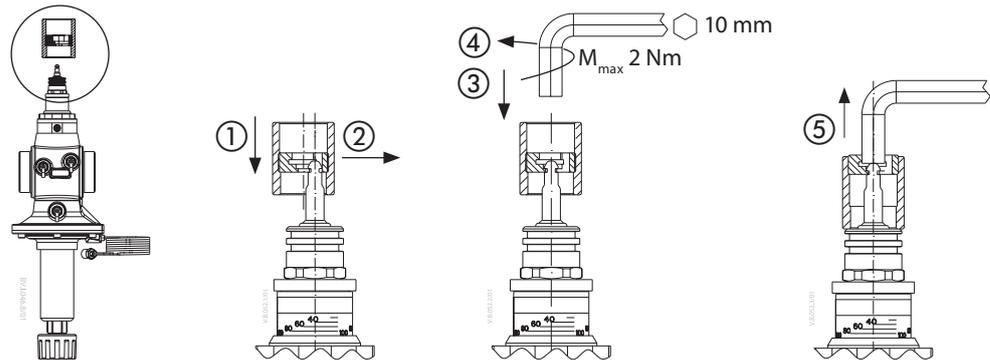

2 Installation

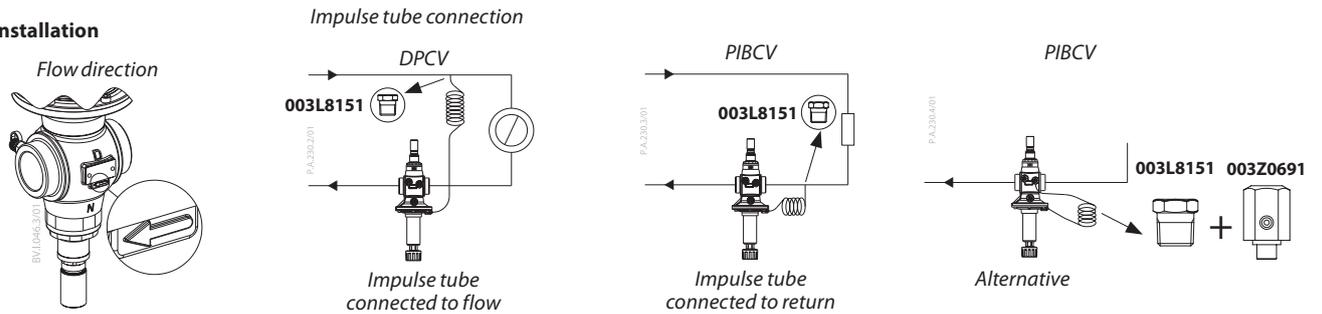


3 Note: Best done before pressurizing the system

Setting: Flow %

| | |
|--------------------|--------------|
| Factory setting | DN 40-100 |
| Δp setting | min. setting |
| Flow % | 100 |

| | | |
|--------|--------|--|
| DN | 65-100 | |
| 40-50 | 50 | |
| 65-100 | 42 | |

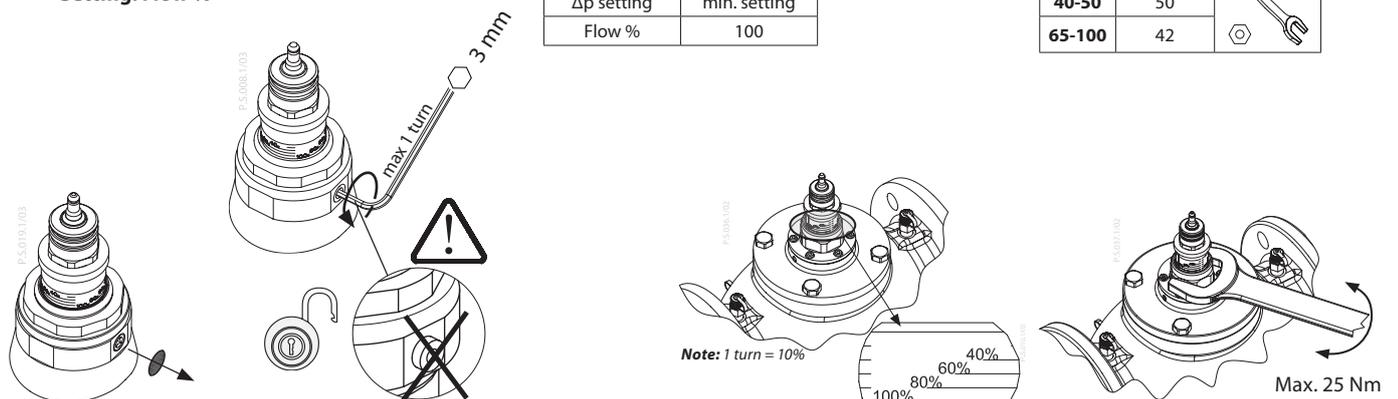



AB-PM DN 40-100

4 Setting: Δp setting *Note: Best done before pressurizing the system*

| | | |
|----|----|----|
| | | |
| DN | 40 | 50 |
| | 5 | 5 |



| | | | |
|----|----|----|-----|
| | | | |
| DN | 65 | 80 | 100 |
| | 13 | | |




| n (turns) | Δp setting |
|-----------|--|
| 0 turns | Min. setting (factory setting) |
| ... | ... |
| 20 turns | Max. setting |



| n (turns) | Δp setting |
|-----------|--|
| 0 turns | Min. setting (factory setting) |
| ... | ... |
| 40 turns | Max. setting |

5 Manual shut-off





Clockwise: Close
Counter-Clockwise: Open

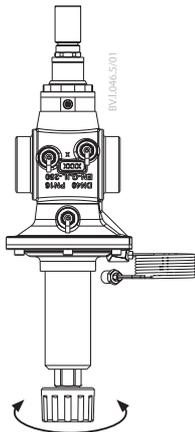

6 Measuring

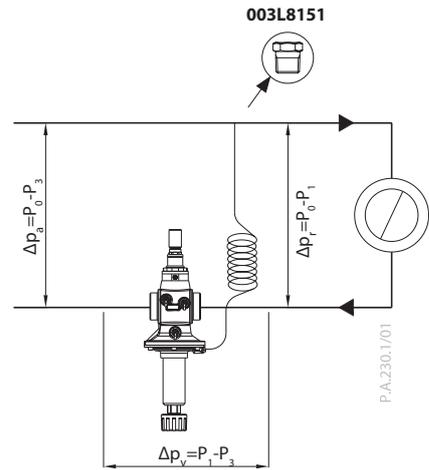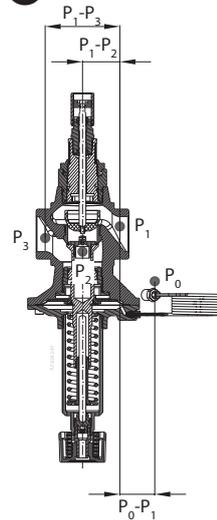

7 Mounting actuator

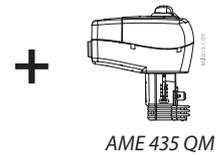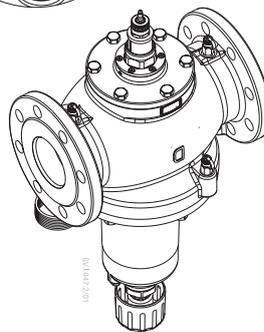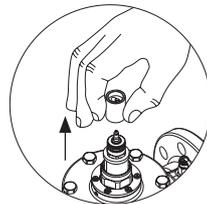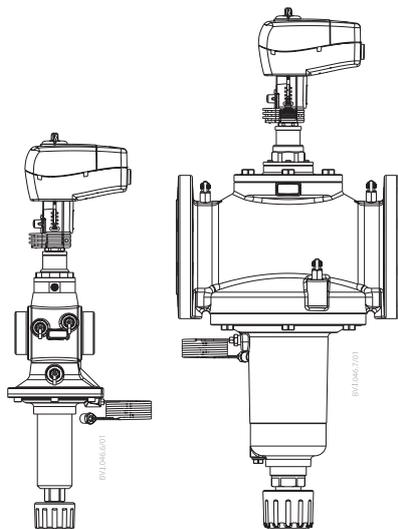

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.